AL080D

Automatic Label Dispenser

Operator's Manual



Company: Kunshan Bojin Trading Co.,Ltd

Website: http://www.smd.cn Contact Person: Mr. Truman Gao


Email: enbojin@gmail.com Tel: 0086-512-57169166

ADD: Room 8-604, Royal Park, Xiaolin Road, Kunshan, Jiangsu P.R.C

1. How to operate the label dispenser AL080D

- 1. Turn off the power switch
- Load your label roller as the above picture show
- 3. Adjust the sensor's position to ensure it's just under your label piece
- 4. Adjust the label length control knob to a right position
- 5. Adjust the speed control knob to a suitable rate
- 6. Turn on the power switch

2. Features and specifications

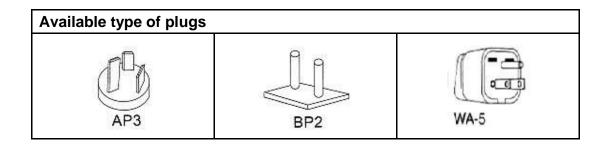

Features

- 1. Ideal for small labels and small work areas
- 2. Will dispense labels and die-cut parts
- 3. Photosensor Accuracy and Reliability
- 4. Automatically removes paper, vinyl, acetate, polyester, foil, etc. from its liner
- 5. Automatically rewinds liner scrap for acleaner working environment
- 6. No tools required for adjusting to different size labels
- 7. No maintenance required
- 8. High Torque Motor for large diameter label rolls

Specifications

Model:	AL080D
Display:	6 digit LED
Aplicable Label Width:	From 4mm to 80mm

Label Height Limit:	4 - 100mm Free			
Core and Roll Size:	Internal Diameter: More than 50mm Outside Diameter: Less than 150mm			
Feed Speed	From 16mm to 130mm per second			
Power:	AC110V 60Hz / AC220V 50Hz			
Dimensions & Weight:	225(W) x 158(L) x 172(H)mm 4.0kg			

Packing List

No.	Descriptions	Quantity	N.W.	G.W.	Measurement	
1	Automatic label dispenser	1 pc	3.5Kg	4.0Kg	3 0×24.5×35cm	
One unit per carton, standard export packing.						